



DEEBOT **X11** OMNICYCLONE  
Instruction Manual

|                              |       |  |     |
|------------------------------|-------|--|-----|
| Instruction Manual.....      | EN    |  | P03 |
| Manuel d'instructions.....   | FR-CA |  | P33 |
| Manual de instrucciones..... | ES-LA |  | P64 |

## IMPORTANT SAFETY INSTRUCTIONS

### IMPORTANT SAFETY INSTRUCTIONS

When using an electrical Appliance, basic precautions should always be followed, including the following:

### **READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE SAVE THESE INSTRUCTIONS**

1. Do not allow to be used as a toy. Close attention is necessary when used by or near children.
2. Clear the area to be cleaned. Remove power cords and small objects from the floor that could entangle the Appliance. Tuck rug fringe under the rug base, and lift items such as curtains and tablecloths off the floor.
3. If there is a drop off in the cleaning area due to a step or stairs, you should operate the Appliance to ensure that it can detect the step without falling over the edge. It may become necessary to place a physical barrier at the edge to keep the unit from falling. Make sure the physical barrier is not a trip hazard.
4. Only use as described in this manual. Only use attachments recommended or sold by the

manufacturer.

5. Do not handle plug or appliance with wet hands.
6. Non-rechargeable batteries are prohibited.
7. Do not use without Dust Bin and/or Filters in place.
8. Do not operate the vacuum in an area where there are lit candles or fragile objects on the floor to be cleaned.
9. Do not use and store in extremely hot or cold environments (below  $-5^{\circ}\text{C}$  / $23^{\circ}\text{F}$  or above  $40^{\circ}\text{C}$  / $104^{\circ}\text{F}$ ). Please charge the robot in temperature above  $0^{\circ}\text{C}$  / $32^{\circ}\text{F}$  and below  $40^{\circ}\text{C}$  / $104^{\circ}\text{F}$ .
10. Keep hair, loose clothing, fingers, and all parts of body away from any openings and moving parts.
11. Do not operate the Appliance in a room where an infant or child is sleeping.
12. For INDOOR use ONLY. Do not use the Appliance in outdoor, commercial or industrial environments. Do not use Appliance on wet surfaces or surfaces with standing water.
13. Do not allow the Appliance to pick up large objects like stones, large pieces of paper, or any item that may clog the Appliance.
14. Do not use to pick up flammable or combustible materials such as gasoline, printer, or copier

- toner, or use in areas where they may be present.
15. Do not pick up anything that is burning or smoking, such as cigarettes, matches, hot ashes, or anything that could cause a fire.
  16. Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
  17. Take care not to damage the power cord. Do not pull on or carry the Appliance or Docking Station by the power cord, use the power cord as a handle, close a door on the power cord, or pull power cord around sharp edges or corners. Do not run Appliance and Docking Station over the power cord. Keep power cord away from hot surfaces. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
  18. If the power cord is damaged, it must be replaced by the manufacturer or its service agent in order to avoid a hazard.
  19. Do not use with a damaged power cord or plug. Do not use the Appliance or Docking Station if it is not working properly, has been dropped, damaged, left outdoors, or come in contact with water. It must be repaired by the manufacturer or its service agent in order to avoid a hazard.
  20. Turn OFF the power switch before cleaning or maintaining the Appliance. Turn off all controls before unplugging. Always turn off this appliance before connecting or disconnecting motorized nozzle.
  21. Turn OFF the Power Switch before removing the Dust Bin.
  22. Remove the Appliance from the Docking Station, and turn OFF the power switch to the Appliance before removing the battery for disposal of the Appliance.
  23. The battery must be removed and discarded according to local laws and regulations before disposal of the Appliance.
  24. Please dispose of used batteries according to local laws and regulations.
  25. Do not incinerate the Appliance even if it is severely damaged. The batteries can explode in a fire.
  26. When not using the Docking Station, unplug from outlet when not in use and before servicing.
  27. The Appliance must be used in accordance with the directions in this Instruction Manual. Ecovacs Home Service Robotics cannot be held liable or responsible for any damages or injuries caused by improper use.
  28. Prevent unintentional starting. Ensure the switch

- is in the off position before connecting to battery pack, picking up or carrying the appliance.
29. When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws, or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
  30. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
  31. Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion, or risk of injury.
  32. Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C may cause explosion. The temperature of 130°C can be replaced by the temperature of 265°F.
  33. Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions.
- Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
34. Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
  35. Do not modify or attempt to repair the appliance or the battery pack (as applicable) except as indicated in the instructions for use and care.
  36. Place the cords from other appliances out of the area to be cleaned.
  37. Do not operate the vacuum in a room that has lit candles on furniture that the vacuum may accidentally hit or bump into.
  38. Do not allow children to sit on the vacuum.
  39. Use only as described in this manual. Use only manufacturer's recommended attachments.
  40. Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
  41. Use appliances only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
  42. The robot contains batteries that are only

- replaceable by skilled persons. To replace the robot's battery, please contact Customer Service.
43. If the robot will not be used for a long time, fully charge the robot and power OFF for storage and unplug the Docking Station.
  44. To Reduce The Risk Of Electric Shock – Do not use on wet surfaces. Do not expose to rain. Store indoors.
  45. To Reduce The Risk Of Injury From Moving Parts – Unplug Before Servicing.
  46. Risk Of Injury. Brush May Start Unexpectedly. Unplug Before Cleaning or Servicing.
  47. To reduce the risk of injury, user must read the Instruction Manual.
  48. To Reduce The Risk Of Electric Shock – Do not use outdoors or on wet surfaces.
  49. Please make sure your power supply voltage matches the power voltage marked on the Docking Station.
  50. Do not use the Docking Station if it is damaged.
  51. The plug must be removed from the receptacle before cleaning or maintaining the Docking Station.
  52. Power Switch: “I”=ON, “O”=OFF.
  53. Connect to a properly grounded outlet only. See Grounding Instructions.

|   |                     |
|---|---------------------|
| ≡ | Direct current      |
| ~ | Alternating current |

This Device Complies with DHHS Radiation Rules, 21CFR Chapter 1, Subchapter J.

### Federal Communications Commission (FCC) Interference Statement

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

**Caution:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device contains licence-exempt transmitter(s)/ receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

## RF exposure warning


This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be collocated or operating in conjunction with any other antenna or transmitter.

MPE caution (for mobile device under Part 15.247device)

To satisfy FCC & IC RF exposure requirements, a separation distance of 20 cm or more should be maintained between the antenna of this device and persons during device operation.

To ensure compliance, operations at closer than this distance is not recommended.

To disable the Wi-Fi module on DEEBOT, follow these steps: power on the robot, then place it on the OMNI Station, ensuring that the Charging Contacts on DEEBOT and the Station are properly connected, and press and hold the  for 30 s until you hear beeps.

To enable the Wi-Fi module on DEEBOT, please restart the robot. Additionally, unplug and plug in the Station.


## SAVE THESE INSTRUCTIONS

## GROUNDING INSTRUCTIONS

This appliance must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This appliance is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be inserted into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

**WARNING** – Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded. Do not modify the plug provided with the appliance – if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

This appliance is for use on a nominal 120 V circuit and has a grounding attachment plug that looks like the plug illustrated as the following photo. Make sure that the appliance is connected to an outlet having the same configuration as the plug. No adaptor should be used with this appliance.

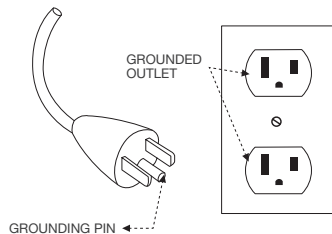

For INDOOR household use ONLY.

This device contains licence-exempt transmitter(s)/ receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

To satisfy FCC&IC RF exposure requirements, a separation distance of 20 cm or more should be maintained between the antenna of this device and persons during device operation.

To ensure compliance, operations at closer than this distance is not recommended.


## Device Update

Typically, some devices are updated bi-monthly, but not always so specific.


Some devices, especially those that went on sale more than three years ago, will only be updated if a critical vulnerability is found and fixed.

# PACKAGE COMPONENTS


## 1 Package Contents

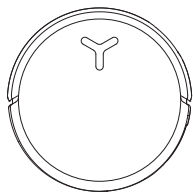


DEEBOT

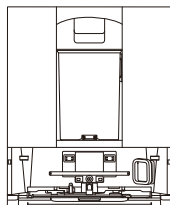

OMNI Station

 


Base

 

Power Cord



 Instruction Manual



Corner guard

### Note:

- A thoughtful pair of corner guards is included to enhance user safety and improve handling comfort.  
To install: Align the inner slot of the corner guard with the edge and press it into place. Compatible with all DEEBOT corner designs.
- Figures in this manual are for reference only and may differ from the appliance. Product design and specifications are subject to changes without notice.

## 2 Product Diagram

### 1. DEEBOT Front View

Buttons on DEEBOT

Press: Toggle start/Pause

Press for 3 s: Return to the station


Double Tap: Release/Retract the mop  
(DEEBOT not in the station)

Obstacle Avoidance Module

AVI Camera

Navigation Module

Supplementary Light

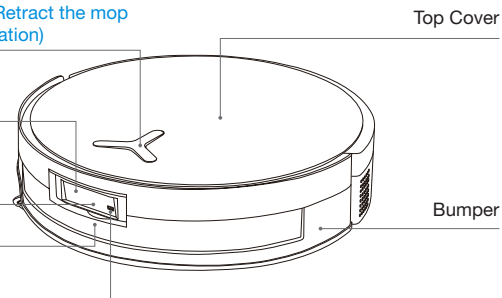

### 2. DEEBOT Bottom View

Anti-drop Sensors


Side Brush

Carpet Detection Sensor

Brush Release Button

Drip Tray

Replaceable Roller Mop

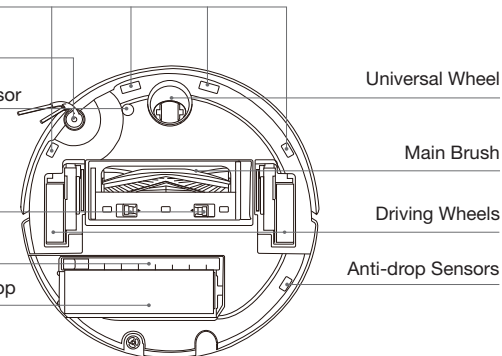


### 3. Inside DEEBOT (Under the Top Cover)

RESET Button

Network Setup: Press the RESET Button, and a voice prompt will be heard to connect DEEBOT to the App.

Restore default settings: Press and hold the RESET button for 5 seconds. After hearing the voice prompt, the startup music will play, and DEEBOT will be restored to its default settings. Exercise caution when using this function.

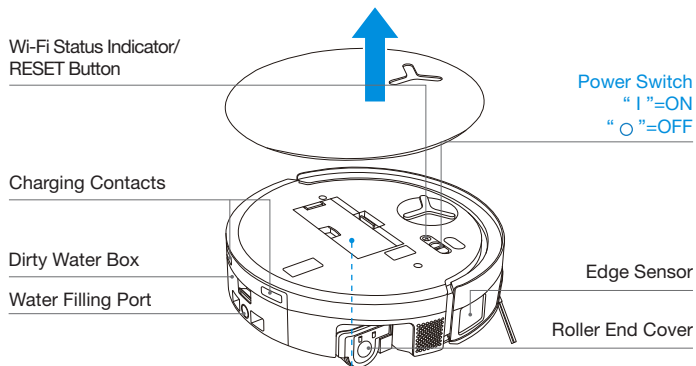


### 4. Dust Bin

Filter Latch

Filter

Filter Holder

Dust Disposal Port

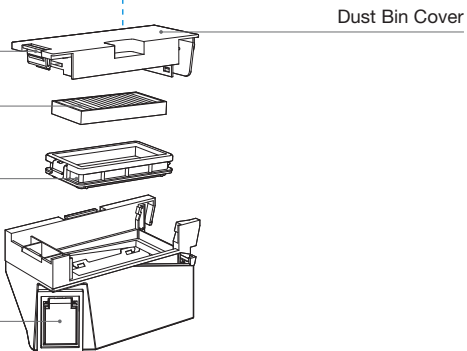

### 5. OMNI Station Front View

Clean Water Tank


Dirty Water Tank

Container Release Button

Cleaning Solution Tank

Charging Contacts

Mop Washing Tray

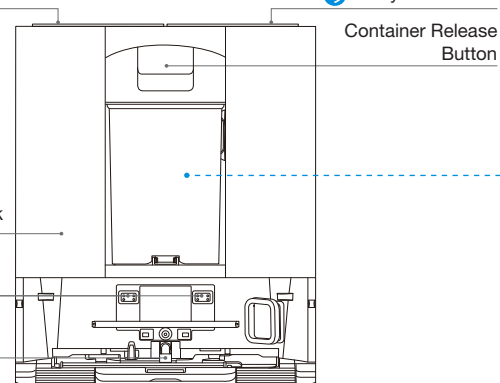


#### Note:

- Flashing Orange: Please check the ECOVACS HOME App for the cause of the malfunction.
- If DEEBOT fails to charge, please wipe the charging contacts with a clean and dry cloth.


### 6. Dust Container

Dump Switch

 Dust Outlet



## 7. OMNI Station Back View

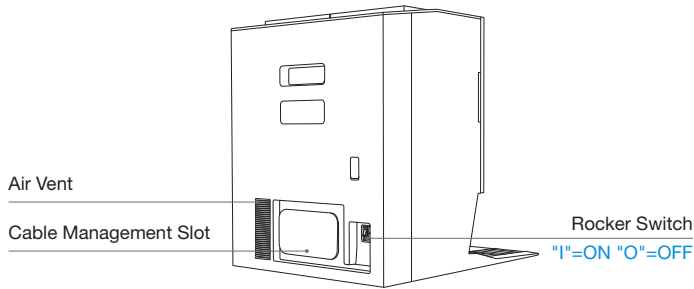

## 8. Indicator Light

| Light Effect    | State                 |
|-----------------|-----------------------|
| Breathing White | Charging              |
| Solid White     | Fully Charged/Running |
| Solid Red       | Low Battery           |
| Flashing Red    | DEEBOT Alarm          |
| Flashing Orange | Station Alarm         |

## 9. Sensors Overview

| Name                      | Functional Description   |
|---------------------------|--|
| Navigation Module         | Laser Ranging is applied to measure the distance between DEEBOT and surrounding objects based on the time difference of reflection, allowing the module to map against the objects around while DEEBOT is moving. The detection range is 10 m.   |
| Obstacle Avoidance Module | Infrared Ranging and similar triangles are applied to measure the distance between the surrounding objects and DEEBOT. When the sensor detects an object nearby, DEEBOT will automatically take a turn to avoid bumping into the object. The detection range is 0.3 m.   |
| Anti-drop Sensors         | Using the Time-of-Flight (dToF) principle, the dToF sensor located on DEEBOT's bottom continuously measures the distance between DEEBOT and the ground. Meanwhile, infrared sensors on the bottom detect the distance using infrared ranging technology. DEEBOT will not move forward when there are stairs in front (such as when the height of the white surface is 55 mm or more, or the height of the black surface is 30 mm or more) and the identified height exceeds the preset one, realizing the anti-drop feature. |
| Carpet Detection Sensor   | The sensor emits 300 kHz ultrasound, whose energy will be absorbed by the carpet, causing the echoed energy to be lower than the threshold. DEEBOT thereby detects the carpet's presence. In the ECOVACS laboratory, more than 50 types of carpets available on the market are identified.   |
| Anti-collision Sensor     | With the principle of the Optocoupler Switch, DEEBOT will avoid obstacles when they are about to collide.  |
| Edge Sensor               | With Infrared Ranging, the edge sensor detects the distance between the DEEBOT and objects on the side. When there is a wall or obstacles on the right, the DEEBOT performs edge cleaning to avoid missing any spots and prevent collisions.   |
| AIVI Camera               | Use AI cameras to collect images of the surrounding environment. Realize video recording. Through interaction with MIC, remote video call can be realized.   |
| Microphone                | The microphone captures sound through diaphragm vibrations caused by the human voice traveling through the air. This enables voice recording and Voice Control to direct the DEEBOT to complete the assigned job through the acquisition and algorithms of sound models. The effective wake distance is 5 m.   |


# INITIAL SETUP AND USE

## 1 Notes before Cleaning




### Tidy up the Area to be Cleaned

For the maximum cleaning area possible, put furniture, such as tables, chairs, and pedestal fans, in their proper place and put away low-lying items, such as weight scales, before using DEEBOT

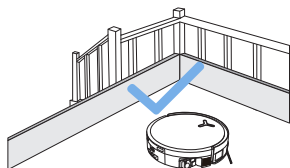


### Prevent DEEBOT from Falling

Place a physical barrier at the edge of a drop, such as staircases and steps, to stop DEEBOT from falling over the edge.

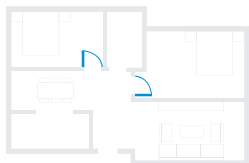

### Open Doors and Help DEEBOT Explore

Open all room doors to help DEEBOT fully explore your house during the first use.

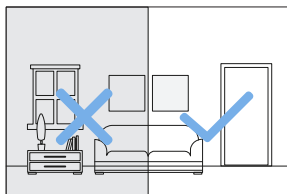

### Provide Sufficient Lighting

Ensure all cleaning areas are well-lit to support DEEBOT's AI camera in accurately avoiding obstacles such as shoes, socks, and cords.



Remove objects, including cables, clothes, and slippers, from the floor to improve cleaning efficiency.



Before using the product on a carpet with tasseled edges, please fold the tassels under the carpet.



Please do not stand in narrow spaces, such as hallways, to avoid blocking the navigation module.




Ensure the clarity of DEEBOT's vision and avoid scratching or smudging the AI camera lens with fingerprints or oily stains. Use a clean, soft cloth to wipe the camera, instead of cleaning agents, detergents, or sprays.

## 2 Quick Start

Remove all protective materials before using the appliance.


### 1. Station Installation

The sound of "click" indicates proper installation.

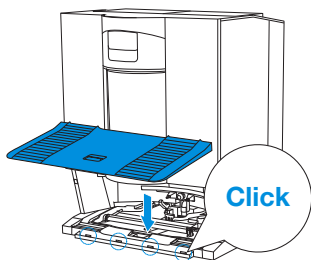

### 2. Assemble and Place the Station

Place the OMNI station against the wall on a flat, hard surface. Do not place items within 0.05 m on either side and 0.8 m in front. Wrap the excess power cord around the cable management slot on the back of the station.

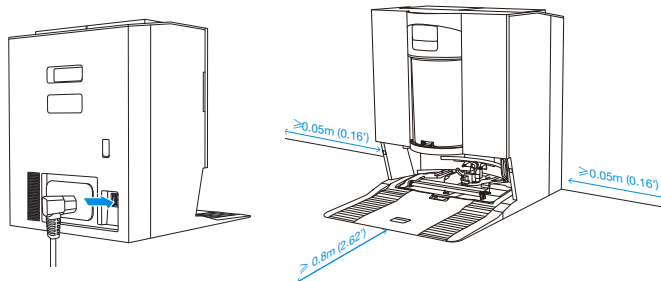


#### Note:

- If there are reflective objects such as mirrors and reflective skirting lines near the station, the bottom 14 cm of such objects should be covered.
- Do not place the station under direct sunlight or in high-temperature environments.
- Place the station in a location with a strong Wi-Fi signal for a better user experience.

## 3 Download ECOVACS HOME APP

To enjoy all available features, it is recommended that you control your DEEBOT via the ECOVACS HOME App.

1. Scan the QR code under the top cover to download the App.

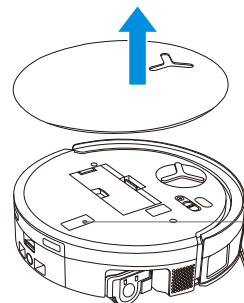



Under the Top Cover

2. Search "ECOVACS HOME" on the App Store or Google Play to download the App.



**Note:** Follow the instructions on the App to complete the registration, login, and connection.

## 4 Connect DEEBOT with APP

**Via Bluetooth:** Turn on DEEBOT and your mobile phone Bluetooth. Allow the App to obtain mobile phone Bluetooth permission. Tap to scan the QR Code on DEEBOT or tap  or  in the App to find the nearby DEEBOT.


**Via Wi-Fi:** You can also choose to connect DEEBOT with the App through other methods according to the prompts on the App's page.

**Note:** Please connect via Bluetooth for a better experience.

### Wi-Fi Network Requirements:


- You are using a 2.4 GHz or 2.4/5 GHz mixed network.
- Your router supports 802.11b/g/n and IPv4 protocol.
- Do not use a VPN (Virtual Private Network) or Proxy Server.
- Do not use a hidden network.
- WPA and WPA2 using TKIP, PSK, AES/CCMP encryption.
- WEP EAP (Enterprise Authentication Protocol) is not supported.
- Use Wi-Fi channels 1-11 in North America and channels 1-13 outside North America (refer to local regulatory agency).
- If you are using a network extender/repeater, the network name (SSID) and password are the same as those of your primary network.
- Please enable the WPA2 on your router.


### Wi-Fi Indicator Light

|   |                           |                         |
|---|---------------------------|-------------------------|
|  | Slow flashing white light | Disconnected from Wi-Fi |
|   | Fast flashing white light | Connecting              |
|   | Steady white light        | Connected to Wi-Fi      |

Please be aware that intelligent features such as remote startup, voice interaction, 2D/3D map display and control settings, and personalized cleaning (depending on the Appliance) require the ECOVACS HOME App, which is constantly updated. You need to agree to our Privacy Policy and User Agreement so that we can process some of your essential and necessary information before you can use certain features of the ECOVACS HOME App to control the Appliance. If you disagree with our Privacy Policy and User Agreement, such features will be unavailable. However, you can still use the basic features of this appliance for manual operation.

## 5 Power on and Charge DEEBOT

Turn on the power switch under DEEBOT's cover ("I" = ON, "O" = OFF), and place DEEBOT in front of the station that is connected to the power supply. Use the ECOVACS HOME App or voice control to recall DEEBOT, or press and hold  on DEEBOT for 3 s, to allow DEEBOT to dock for charging.

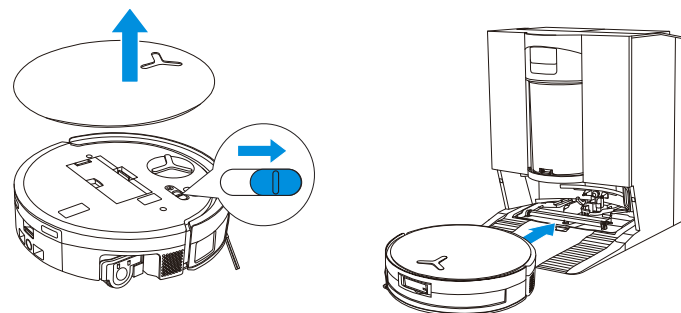


### Note:

- DEEBOT cannot charge when it is powered off.
- After cleaning, it is recommended to keep DEEBOT powered on and charging to ensure it is ready for the next cleaning session.
- To ensure DEEBOT can return to charge smoothly after cleaning, start cleaning from the station and avoid moving the station during the process.

## 6 Fill the Clean Water Tank

Take out the clean water tank, open the tank cover, and fill the tank with water. Close the tank cover and reinstall the clean water tank.

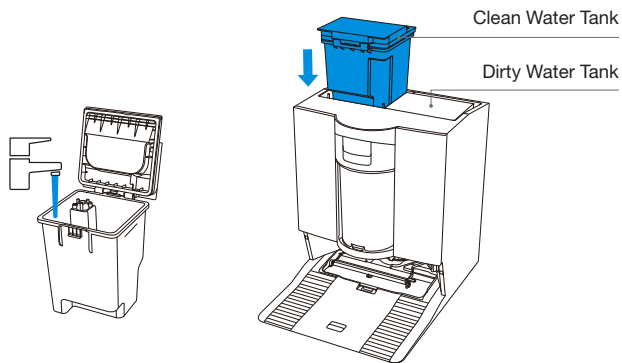


### Note:


- Use only ECOVACS DEEBOT cleaning solution to avoid malfunctions.
- Use a clean, dry cloth to wipe off any water on the surface of the tank before placing it in position.
- Make sure to lock the top covers of both water tanks securely before use.
- Any watermarks in the water tanks are from function testing. Please use it with confidence.

## 7 Add Cleaning Solution (sold separately)

1. Take off the cleaning solution tank's cover, pull out the two cleaning solution boxes, and place them on a level, hard surface.

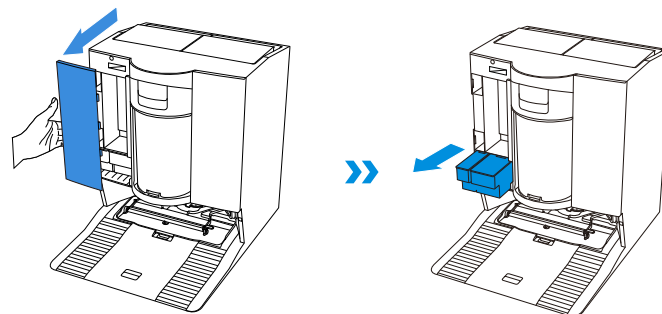


2. Pour the standard cleaning solution into the blue box and the heavy-duty cleaning solution into the black box. After securing the box lids, push them back into the station and close the tank lid.

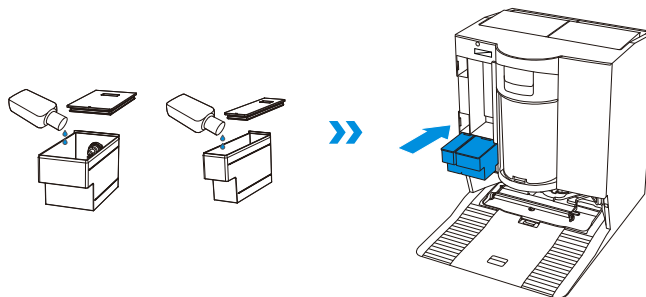

### Note:

- For better performance and longer lifespan of the product, please use ECOVACS DEEBOT cleaning solution (sold separately).
- Do not pour cleaning solution into the clean water tank. Add it to the cleaning solution tank instead. Otherwise, an incorrect ratio may cause excessive foaming and reduce cleaning effectiveness.

3. Return the cleaning solution tank's cover and press the cover firmly to secure it in position.

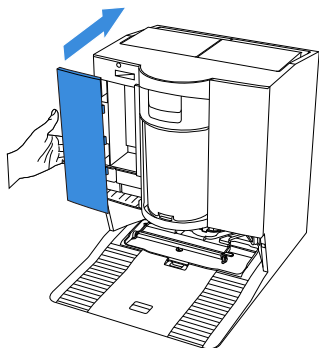

**Note:** Please make sure that no foreign objects fall into the cleaning solution box.

## 8 Operate DEEBOT for Cleaning

### 1. Start Mapping


When creating a map for the first time, please follow DEEBOT to help with some minor issues.

For example, DEEBOT may get stuck under furniture. Please refer to the following solutions:


- ① Raise the low-sitting furniture if possible;
- ② Cover the bottom of the furniture;
- ③ Set up a virtual boundary via the App.

### 2. Start Cleaning


- The DEEBOT's water tank is automatically refilled through the station. Manual refilling is not needed.
- When mopping, DEEBOT will recognize floor types and is able to lift mops automatically when encountering carpets. Please do not use DEEBOT on shaggy rugs or carpets with fibres longer than 10 mm. It is recommended to fold up the shaggy rugs with fibres longer than 10 mm during the cleaning process, or set the shaggy carpeted area as a no-entry zone by setting a virtual boundary in the ECOVACS HOME App.


Please ensure that DEEBOT is in the station and is fully charged before cleaning for the first time. Tap  on DEEBOT to start. You can also use the ECOVACS HOME App or voice control to start.

### 3. Pause


Tap  on DEEBOT to pause it while it is working. You can also use the ECOVACS HOME App or voice control to pause DEEBOT.


### 4. Wake Up

After pausing for a while, all indicator lights on DEEBOT will go out. To wake up DEEBOT, press .

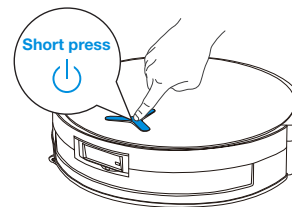


## 5. Back to Station

Use the ECOVACS HOME App or voice control to recall DEEBOT, or press and hold the  button on DEEBOT for 3 s, to allow DEEBOT to dock for charging.

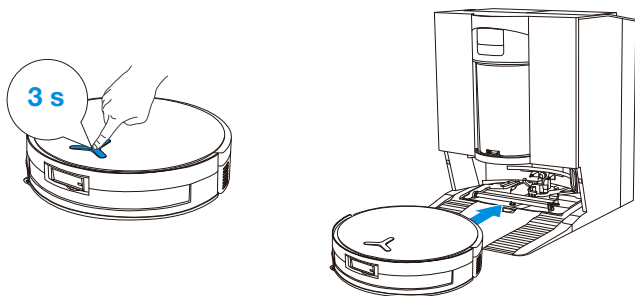

## 6. Deep Sleep Mode

DEEBOT will enter deep sleep mode if it stays outside the station for about 10 h to protect the battery. Please switch OFF and ON to wake DEEBOT up.

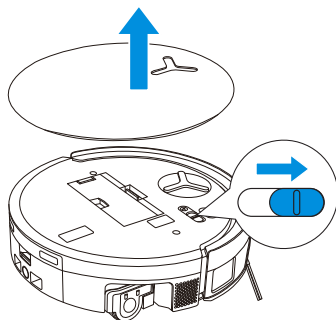

When PowerBoost Charging is enabled, DEEBOT will fast charge for about 5 minutes after returning to the station. It will then switch to standard charging and stop automatically once fully charged.

# REGULAR MAINTENANCE

## 1 Maintenance Frequency

To keep DEEBOT running at peak performance, perform maintenance and replace parts at the following frequencies:


| Part  | Maintenance Frequency | Replacement Frequency                   |
|---|-----------------------|---|
| Washable Roller Mop   | /                     | Every 1-2 months                        |
| Dirty Water Box   | Every week            | /                                       |
| Drip Tray   | Every week            | /                                       |
| Side Brush  | Every 2 weeks         | Every 3-6 months                        |
| Main Brush  | Every week            | Every 6-12 months                       |
| Filter  | Every week            | Every 3-6 months                        |
| Universal Wheel<br>Anti-drop Sensors<br>Bumper<br>Charging Contacts on DEEBOT<br>Charging Contacts on OMNI Station<br>Navigation Module<br>Navigation Module<br>AIVI Camera | Approx. every month   | /                                       |
| Clean Water Tank  | Every 3 months        | /                                       |
| Dirty Water Tank  | Every month           | /                                       |
| Body and Bottom of the Station  | Every month           | /                                       |
| Mop Washing Tray  | Every 5 months        | /                                       |
| Cleaning Solution Unit  | Every month           | /                                       |
| Dust Container  | After each use        | /                                       |
| Dust Container Filter   | Every 3-6 months      | Every 3-6 months/ After multiple washes |

**Note:** Explore more accessories at the ECOVACS HOME App or at <https://www.ecovacs.com>.


## 2 DEEBOT Maintenance

### 1. Maintain Dust Bin and Filter


1. Remove the dust bin and then empty it.

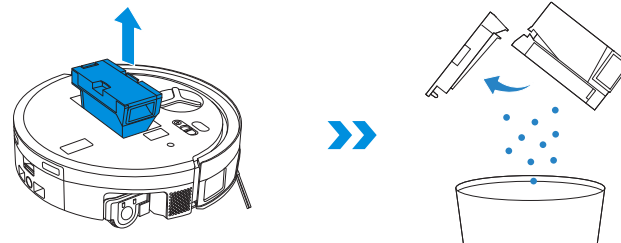

2. Open the filter net and remove the filter.

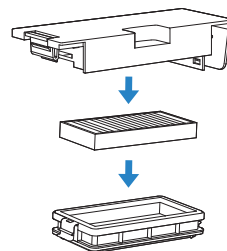


3. Rinse the dust bin and filter with water, and shake off the water droplets.

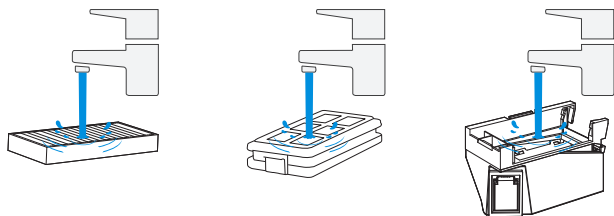

**Note:**

- Please rinse the filter with water as shown.
- Do not use fingers or brushes to clean the filter.

4. Air-dry the dust bin and filter.

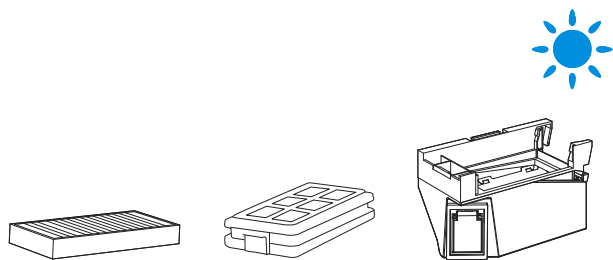


**Note:** Completely dry the components before use.

## 2. Maintain Main Brush and Side Brush


### Clean Main Brush

1. Remove the cover from the main brush.


Before turning DEEBOT upside down, please empty any remaining water from the dirty water tank and drip tray.

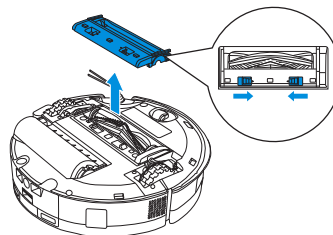


2. Remove and clean the main brush.

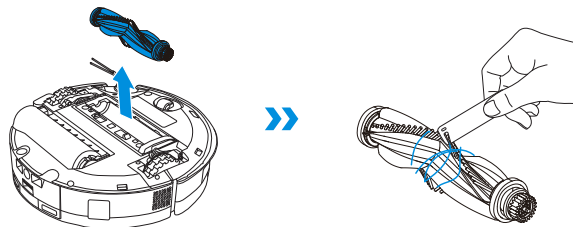

3. Remove, clean, and dry the brush comb.

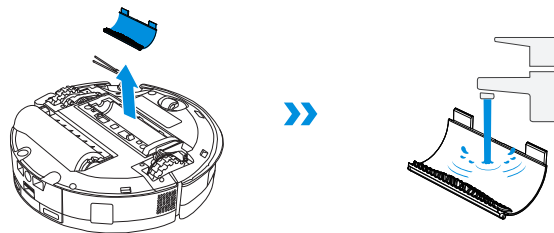


4. Install the brush comb, main brush, and the cover.

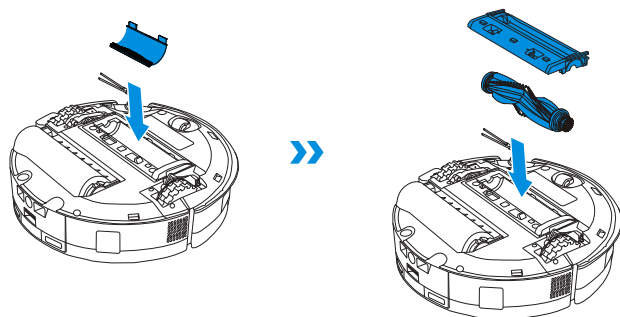

### Clean Side Brush


Remove the side brush using a screwdriver and clean it.

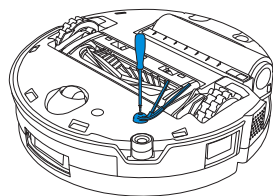

## 3. Maintain Roller Mop


### Clean Roller Mop

1. Double tap  button to release the roller mop component.

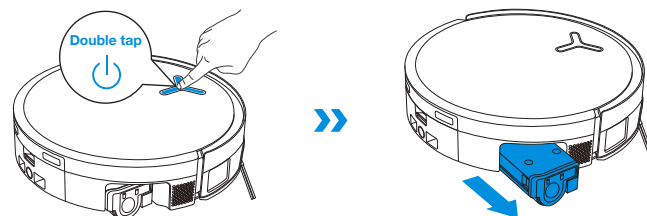


**Note:** Do not pull the roller forcefully while it is retracted, as this may damage the roller mop component.

2. Press the lateral unlock button to remove the roller.

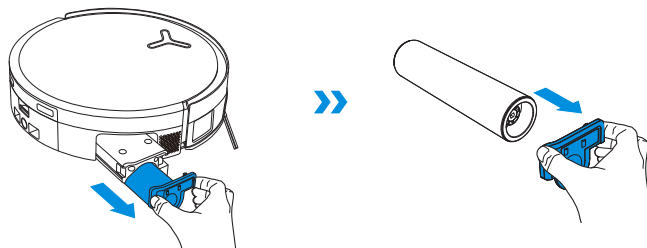

3. Clean the roller mop.

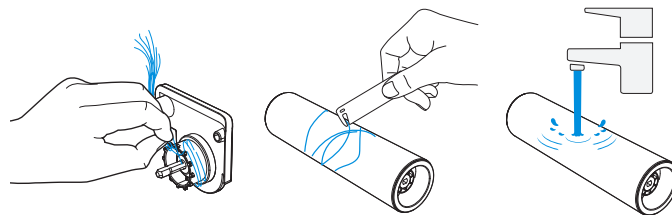


4. Clean inside the roller.



**Note:** Do not wash DEEBOT with water.


5. Push the roller mop into the roller end cover and double tap  button to retract.

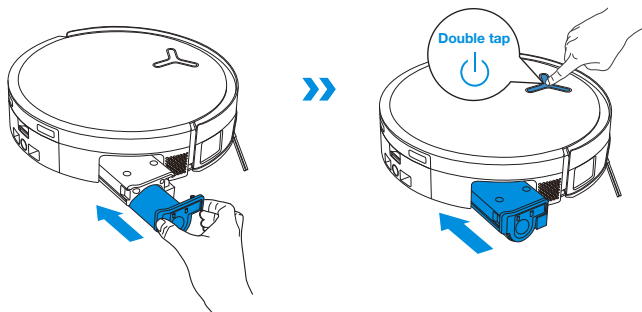

**Note:** Explore more accessories at the ECOVACS HOME App or at <https://www.ecovacs.com>.


## 4. Maintain Clean Drip Tray

1. Remove the drip tray.

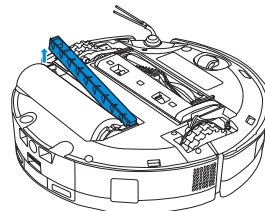


**Note:** A small amount of residual water may leak out when flipping DEEBOT if it's not in drying mode.

2. Remove and clean drip tray components.

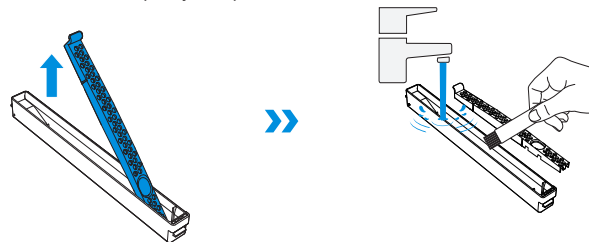


3. Please install the drip tray filter components as shown in the illustration.

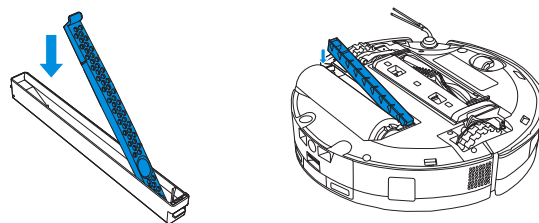


## 5. Maintain Dirty Water Box


1. Remove the dirty water box and the filter net.

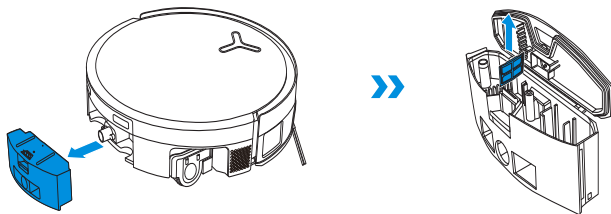

2. Clean the filter net, box, and sewage outlet.

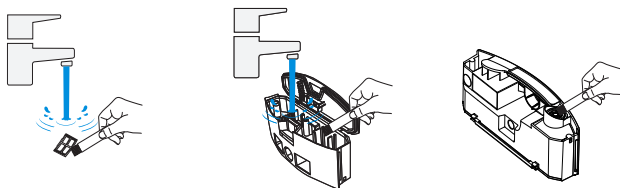


3. Reinstall the filter, press securely, and then reattach the dirty water box cover.

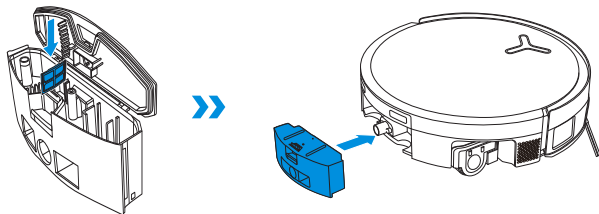


Press the dirty water box cover firmly in the guided direction until its plane is completely flush with the upper edge of the box to ensure a tight seal.

## 6. Maintain Other Components


### Clean the Obstacle Avoidance Module Lens

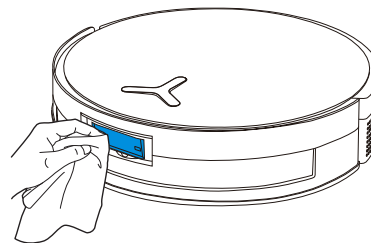


### Clean the Bumper

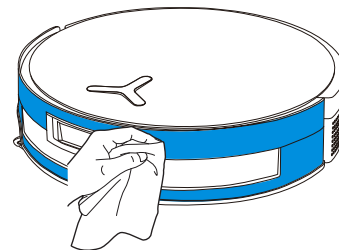


## Clean the Navigation Module

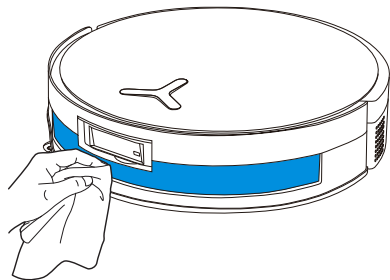


## Clean the Edge Sensor

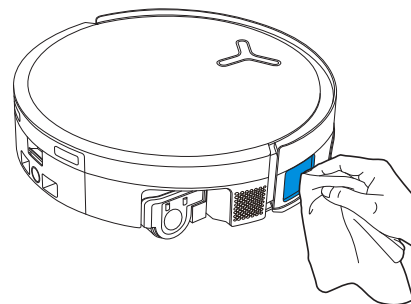

## Clean Charging Contacts

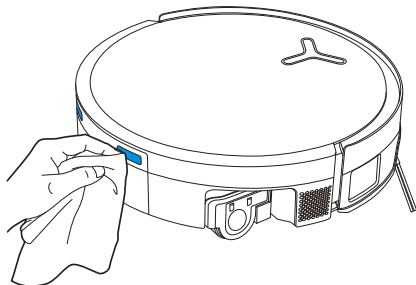


## Clean the Anti-drop Sensors

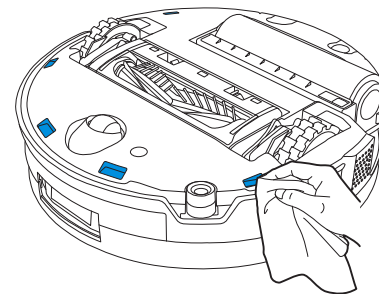


### Note:

- Wipe the components with a clean, dry cloth. Never use a wet cloth. Do not use cleaning sprays or detergents, as moisture may cause damage.
- Charging contacts contain sensitive electronic components. Clean them with a dry cloth. Do not use a wet cloth to prevent water damage.

## Clean the Universal Wheel

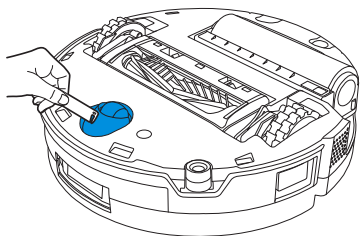

## Clean the Driving Wheels

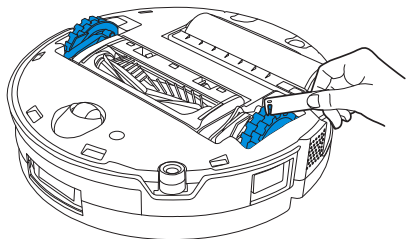


**Note:** Explore more accessories at the ECOVACS HOME App or at <https://www.ecovacs.com>.


## 3 Station Maintenance

### 1. Maintain Dust Container and its Filter


1. Press the container release button, and remove the dust container.

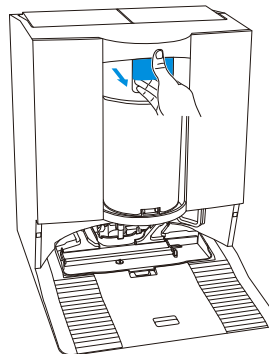


2. Hold the dust container with the bottom facing your trash can, press the dump switch, and the bottom cover of the dust container will open to dump the dust.

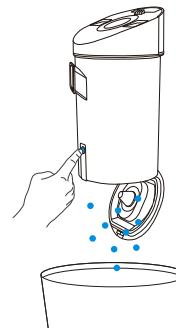


3. Twist off the top and remove the filter.

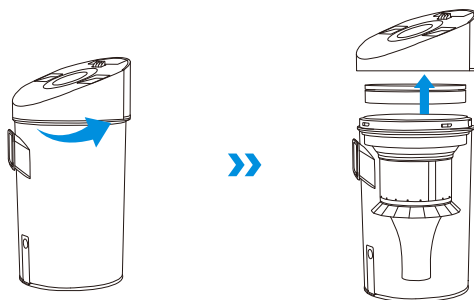


5. Rinse the container with water or wipe it with a wet cloth.

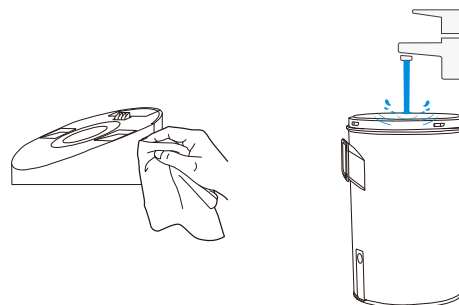

4. Remove the multi-cone structure.

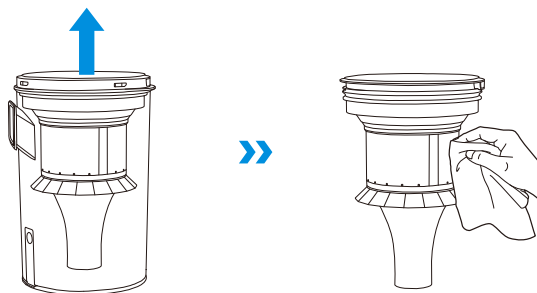

6. Rinse the dust container and sponge filter with water and dry them.

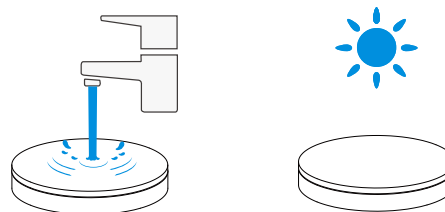


**Note:** It is not recommended to wash the multi-cone structure. If needed, you can use a wet cloth to wipe it and let it air-dry.


**Note:** Completely dry the filter before use.

## 2. Maintain Mop Washing Tray


1. Remove and clean the mop washing tray and the station base.

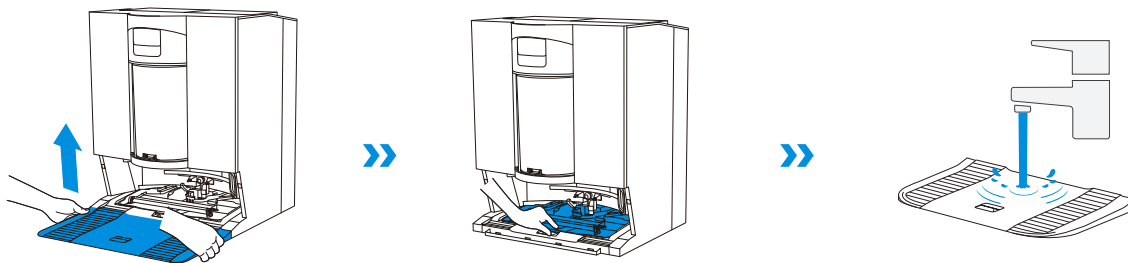


2. Remove and clean the soaking tray.

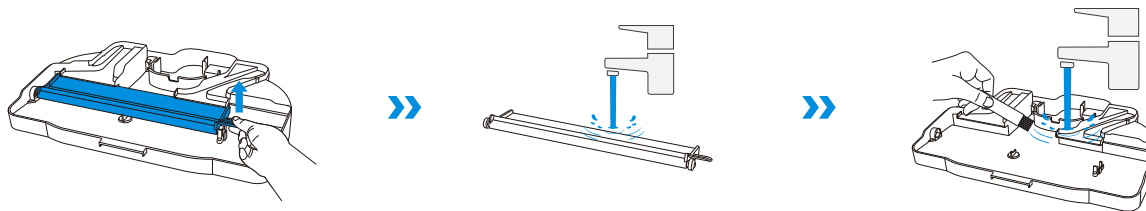

3. Install the soaking tray.

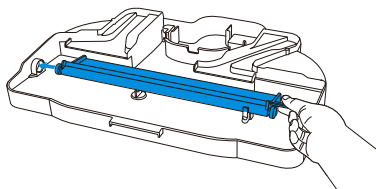


4. Install the mop washing tray and base.

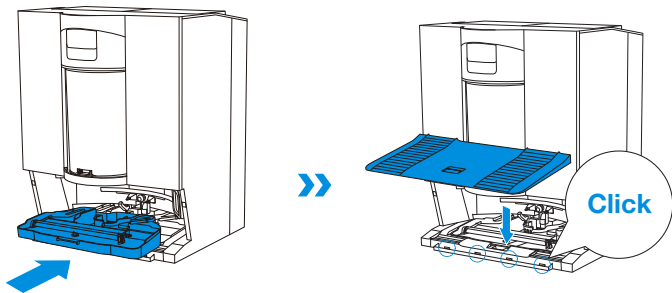

**Note:** Please install the tray and base properly to prevent malfunction.

## 4 Storage

Please fully charge and switch OFF DEEBOT before storage. Please recharge it every 1.5 months to prevent the battery from over-discharging.

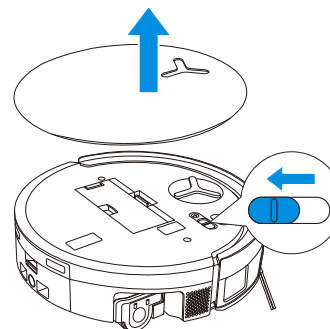


**!** Please note that DEEBOT cannot charge when powered OFF.


### Note:

- After DEEBOT finishes its cleaning task, it is recommended not to power it off but to keep it charging, to better prepare for the next cleaning session.
- If the battery is over-discharged or not used for a long time, DEEBOT may not be charged. Please contact ECOVACS for help. Do not disassemble the battery by yourself.
- If you do not use the product for a long time, keep the dirty water box, water tanks empty and the mop dry.


# TROUBLESHOOTING

For the following possible issues, refer to the corresponding solutions.

| No. | Malfunction   | Possible Cause   | Solution  |
|-----|---|--|---|
| 1   | DEEBOT is not able to connect to the ECOVACS HOME App.              | Incorrect Wi-Fi username or password entered.  | Enter the correct Wi-Fi username and password.  |
|     |   | DEEBOT is not within range of your home Wi-Fi signal.  | Make sure DEEBOT is within range of your home Wi-Fi signal. Try to stay as close to the router as possible.   |
|     |   | DEEBOT is not in the configuration state.  | Press the Reset button to connect DEEBOT to your phone by Bluetooth. If it fails, please press the Reset button +  , and connect via the ECOVACS HOME App. |
|     |   | There is no home Wi-Fi on the Wi-Fi list.  | 1. Check if the Wi-Fi name contains special characters. Please do not use special characters like ! @#& ¥%&#x2013;. 2. Do not use a 5 GHz network.  |
|     |   | An incorrect App is installed.   | Please download and install the ECOVACS HOME App.   |
| 2   | Unable to create the furniture map in the App.                      | Moving DEEBOT when cleaning might cause the map to be lost.  | During cleaning, do not move DEEBOT.  |
|     |   | Auto cleaning is not finished.   | Make sure DEEBOT automatically returns to the OMNI Station after cleaning.  |
|     |   | Multi-floor mode was not enabled when the second map was created.  | Please enable multi-floor mode in the App.  |
| 3   | The side brush drops out of place during use.                       | The side brush is not properly installed.  | When installing the side brush with a screwdriver, ensure the screw is tightened securely.  |
| 4   | No signal found. Unable to return to the station.                   | The OMNI Station is incorrectly placed.  | Place the station properly according to the instructions in the <a href="#">[Power on and Charge DEEBOT]</a> section.   |
|     |   | The OMNI Station is out of power or has been moved.  | Check whether the OMNI Station is connected to the power supply. Do not move the OMNI Station.  |
|     |   | DEEBOT does not start cleaning from the OMNI Station.  | It is recommended that DEEBOT start cleaning from the OMNI Station.   |
|     |   | The docking route is blocked. For example, the door is closed to the room where the OMNI Station is placed.  | Keep the charging route clear.  |
| 5   | DEEBOT returns to the OMNI Station before it has finished cleaning. | The room is so large that DEEBOT needs to return to recharge.  | Please enable auto-resume. For more details, please follow the App instructions.  |
|     |   | In highly complex home layouts, cleaning efficiency may decrease, possibly resulting in incomplete cleaning. | Simplify your home layout.  |

| No. | Malfunction  | Possible Cause   | Solution   |
|-----|--|--|--|
| 6   | DEEBOT is unable to charge.  | DEEBOT is not switched ON.   | Switch ON DEEBOT.  |
|     |  | DEEBOT's charging contacts are not connected to the OMNI station's charging contacts.  | Make sure that DEEBOT's charging contacts have connected to the station's charging contacts and  flashes. Check whether DEEBOT's and OMNI station's charging contacts are dirty. Please clean these parts according to the instructions in the [REGULAR MAINTENANCE] section. |
|     |  | The OMNI Station is not connected to the power supply.   | 1. Make sure the OMNI station is connected to power supply.<br>2. Once the power is connected, ensure that the motor startup sound can be heard.   |
|     |  | The base has not been installed in place.  | Refer to the [Quick Start] section for correct installation.   |
| 7   | DEEBOT is very loud during cleaning.   | The main brush/side brush is tangled, or the dust bin/filter is blocked.   | It is recommended to clean the main brush, side brush, dust bin, roller mop, filter, etc., regularly.  |
|     |  | DEEBOT is in Strong Suction Mode or Max Suction Power Mode.  | Switch to Standard Mode.   |
| 8   | DEEBOT gets stuck while working and stops.   | DEEBOT is tangled with objects on the floor (electrical wires, curtains, carpet fringing, etc.).   | DEEBOT will try various ways to free itself. If its attempts fail, manually remove the obstacles and restart.  |
|     |  | DEEBOT might be stuck under furniture with an entrance of similar height.  | Please raise the furniture, set a physical barrier, or set a virtual boundary via the ECOVACS HOME App.  |
|     |  | DEEBOT is stuck in a narrow area.  | Tidy up your home, set a physical barrier, or set a virtual boundary via the ECOVACS HOME App.   |
| 9   | During cleaning, DEEBOT may encounter issues like a disorderly route, biased movement, repeated cleaning over the same spots, and missing small areas. (If there is a large area that has not been cleaned temporarily, DEEBOT will automatically clean the missed area. Sometimes DEEBOT will re-enter a cleaned room, which may not be repeated cleaning, but DEEBOT finds any missed area.) | Objects such as wires and slippers placed on the ground block DEEBOT.  | Before cleaning, please tidy up scattered wires, slippers, and other objects on the ground as much as possible. If there is any area missed during cleaning, DEEBOT will correct it automatically. Please refrain from interfering (such as moving DEEBOT or blocking its route).  |
|     |  | The driving wheels may slip on the ground when DEEBOT climbs steps, thresholds, and door bars, which can affect its judgment of the entire home environment. | It is recommended to close the door of the affected area and clean it separately. After cleaning, DEEBOT will return to its starting location.   |
|     |  | On freshly waxed or polished floors, as well as smooth tiles, there may be less friction between the driving wheels and the floor.                           | Please wait for the wax to dry before cleaning.  |
|     |  | Due to variations in home layouts, some areas cannot be entered by DEEBOT.   | Tidy up your home to ensure that DEEBOT can enter the areas to be cleaned.   |

| No. | Malfunction  | Possible Cause  | Solution  |
|-----|--|---|---|
| 10  | Delay in remote control.   | The Wi-Fi signal is poor, causing the video loading to be slow.                             | Use DEEBOT in areas with a good Wi-Fi signal.   |
| 11  | After returning to the OMNI station, DEEBOT does not empty its dust bin.                     | The Auto-Empty function has not been turned on in the ECOVACS HOME App.                     | Turn on the Auto-Empty function in the ECOVACS HOME App.  |
|     |  | Manually moving DEEBOT back to the station will not trigger the Auto-Empty function.        | It is recommended that DEEBOT be allowed to return to the OMNI Station on its own. Please do not manually move it.  |
|     |  | In Do Not Disturb mode, DEEBOT will not empty the dust after returning to the OMNI Station. | Turn off Do Not Disturb in the ECOVACS HOME App or manually start dust-emptying.  |
|     |  | The station detects a decrease in empty efficiency.   | Clean the dust container and the sponge filter according to the <a href="#">[REGULAR MAINTENANCE]</a> section, close the dust collection correctly, and install it in the station.  |
|     |  | Check if the dust bin is full and causes a blockage.  | Clean the dust bin according to the <a href="#">[REGULAR MAINTENANCE]</a> section.  |
|     | If the above possible causes have been ruled out, components of the station may be abnormal. | Please contact customer service for assistance.   |   |
| 12  | Auto-Empty unsuccessful.   | The station detects a decrease in empty efficiency.   | Clean the dust container and the sponge filter according to the <a href="#">[REGULAR MAINTENANCE]</a> section, close the dust collection correctly, and install it in the station.  |
|     |  | The outlet of the dust bin is blocked by foreign objects.                                   | Remove the dust bin and clear the foreign objects on the outlet.  |
|     |  | The dust container is not properly installed or firmly closed.                              | Install the dust container correctly and close it firmly.   |
| 13  | Dust leakage occurs while DEEBOT is working.   | The outlet of the dust bin is blocked by foreign objects.                                   | Remove the dust bin and clear the foreign objects on the outlet.  |
| 14  | The roller mop does not rotate.  | The roller mop is not correctly installed.  | Install the roller mop properly according to the <a href="#">[REGULAR MAINTENANCE]</a> section.   |
|     |  | The roller mop is blocked by foreign objects.   | Clean and install the roller mop properly according to the <a href="#">[REGULAR MAINTENANCE]</a> section.   |
| 15  | The driving wheel is stuck.  | The driving wheel is entangled or stuck due to foreign objects.                             | Rotate and press the driving wheel to check for any wrapping or obstruction by foreign objects. If any foreign objects are found, please clean them promptly. If this issue persists, please contact customer service for assistance. |

| No. | Malfunction   | Possible Cause   | Solution   |
|-----|---|--|--|
| 16  | The mop washing tray is full of water and cannot be emptied. A voice prompt reports the mop washing tray malfunction. | The dirty water tank is not properly installed.  | Tap down on the dirty water tank to ensure it is properly installed.   |
|     |   | The sealing plugs in the dirty water tank are not installed properly.                      | Make sure that the two sealing plugs are properly installed.   |
|     |   | The mop washing tray is not properly installed.  | Check and ensure the mop washing tray is properly installed.   |
|     |   | The mop washing tray base gets dirty.  | Detach and wash the mop washing tray base with water.  |
|     |   | Check if the floating ball gets stuck when there is no water in the mop washing tray base. | Take out the mop washing tray to put the floating ball back in place.  |
|     |   | The OMNI Station cannot drain water normally.  | Place DEEBOT in the station. After ensuring it's charging, double tap  . If the issue persists, please contact customer service for assistance. |
|     |   | The suction port of the mop washing tray is blocked by foreign objects.                    | Ensure that there is no foreign object in the suction port of the mop washing tray.  |
|     |   | The voice alert persists after all the above solutions are tried.                          | Power off and on the station. If this issue persists, please contact customer service for assistance.  |
| 17  | Dirty water box malfunction or frequent auto-wash.  | The dirty water box is overly laden with dust.   | Remove and empty the dirty water box, and then rinse it and reinstall. If this issue persists, please contact customer service for assistance.   |
|     |   | The drip tray is overly laden with dust.   | Remove and empty the drip tray, and then rinse it and reinstall. If this issue persists, please contact customer service for assistance.   |


## TECHNICAL SPECIFICATIONS

|                                 |                    |
|---------------------------------|--------------------|
| Model                           | <b>DEX99-1</b>     |
| Rated Input                     | 16.4V === 3A       |
| Fast Charge Input               | 16.4V === 9.5A     |
| Charging Time                   | About 4 h          |
| Station Model                   | <b>CH2512</b>      |
| Rated Input                     | 110-120V ~ 50-60Hz |
| Nominal charge output           | 16.4V === 3A       |
| Fast Charge Output (Short time) | 16.4V === 9.5A     |
| Rated Input Current(Charging)   | 2.5 A              |
| Power(Emptying)                 | 4.5 A              |
| Power(Hot Water Washing Mop)    | 14 A               |

Output power of the wireless module is less than 100 mW.

Note: Technical and design specifications may be changed for continuous product improvement.

Explore more accessories at <https://www.ecovacs.com>.

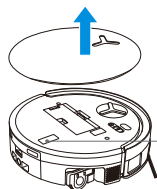

Please use the mobile camera to scan the QR code and obtain the user guide.